


Isoled

Ana Ölçüler / Montaj Ölçüleri


Gövde	Elektrostatik toz boyalı metal
Led	SMD midpower
Optik Kapak	Opal cam
Sürücü	Pelsan markalı yüksek verimli sürücü

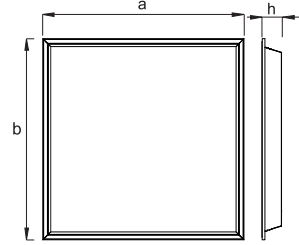

	axbxh
33W	595x595x60mm

Ürün Kodu	Güç (W)	Şebeke Gerilimi(V)	Frekans (Hz)	Renk Sıcaklığı(K)	Renksel Geriverim	Işık Akısı (lm)	Etkinlik Faktörü (lm/W)
5615 3011	33	220-240	50-60	3000-4000-6500	> 80	3000	91

Isoled MONTAJ ŞARTNAMESİ

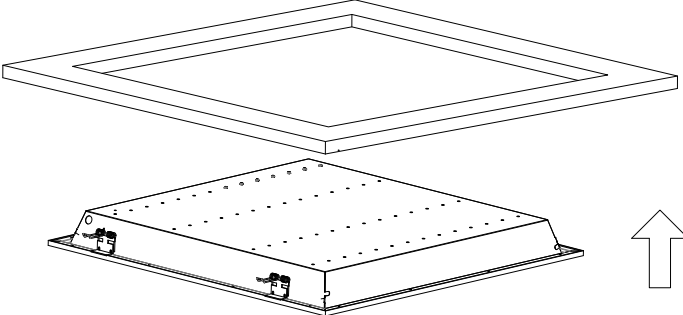

- Armatürün kutusundan çıkan aparatları kasaya sabitleyiniz.
- Kutudan çıkan 4 adet yayı aparatların üzerine takınız ve doğru çalıştığından emin olunuz.
- Armatürün elektriksel bağlantısını ehliyetli bir elektrikçiye yaptırınız.
- Armatürün mandallarını açarak alçıpan tavana sabitleyiniz.
- Bağlantıların doğru olduğunu kontrol edip enerji veriniz.


Güvenlik Uyarıları!

- Armatür montajını deneyimli ve ehliyetli bir elektrikçiye yaptırınız.
- Kurulum ve bakım işlemlerinden önce şebeke elektriğini kesiniz.
- Armatörü temizlerken sabunlu bir bez kullanınız.
- Kesinlikle tiner ve benzeri yanıcı, zarar verici malzemeler kullanmayınız.
- Ürünü 220-240 V AC / 50-60 Hz şebeke geriliminde kullanınız.
- Bağlantıların sıkı ve doğru olup olmadığını kontrol ediniz.

Isloed

Main Dimensions / Installation Dimensions


Body	Electrostatic polyester powder coated metal
LED	SMD midpower
Diffuser	Opal glass
Driver	Pelsan high efficiency driver

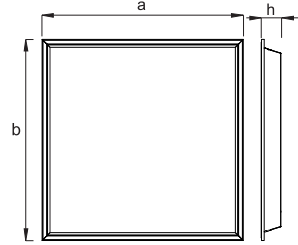

	axbxbh
33W	595x595x60mm

Product Code	Power (W)	Grid Voltage(V)	Frequency (Hz)	Color Temperature(K)	Color Rendering	Luminous (lm)	Efficacy (lm/W)
5615 3011	33	220-240	50-60	3000-4000-6500	> 80	3000	91

Isloed INSTALLATION SPECIFICATIONS

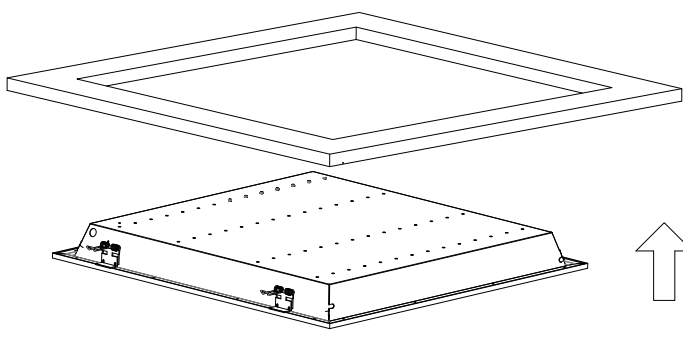

- Take apparatus out of the box and fixed to body
- Install clamp to apparatus and make sure works right
- The luminaire should be installed by an experienced and licensed electrician
- The luminaire is enclosed in to the ceiling
- Give energy when electrical connection checked

Safety Warnings!

- The luminaire should be installed by an experienced and licensed electrician.
- The grid electricity should be turned off before installation and maintenance.
- The luminaire should be cleaned with a soapy cloth.
- Thinner or similar flammable, harmful cleaning substances should be avoided.
- The product should be operated at a 220-240 V AC / 50-60 Hz grid.
- The tightness and the correctness of the connections should be checked.